



Step-Saver Stairlift



With its smooth rack and pinion drive and battery power, the “Step-Saver” can take you up and down a straight stairway, even during a power outage. Its neutral color and modern appearance can coordinate with practically any decor, and its slim rail and carriage save room on the steps to allow others access past the lift.



Specifications

Applications Indoor, straight run stairway
Maximum travel 32 ft (9,754 mm)
Speed 20 fpm (0.1 m/s) approx.
Angle of incline 25° to 50°
Rated load 300 lb (136 kg)
Drive system Rack and pinion
Motor 1/2 hp, 24 VDC. Charges on standard household power 120 VAC, 60 Hz outlet or 240VAC, 50 Hz at top or bottom landing
Standard color Beige carriage and upholstery, beige rail finish.

Adjustable between armrests

Ergonomical up and down control button

Flip up seat that swivels at top and bottom

Easy access to controller and batteries

Two obstruction sensors on carriage

Anti-Skid Surface



Bi-Directional Obstruction Sensor



Step-Saver Stairlift

STANDARD EQUIPMENT

- Rigid and compact aluminum rail extrusion
- Support brackets anchored to stair treads (Not mounted on wall)
- 300 lb (136 kg) capacity
- "Almond beige" seat and rail
- Adjustable width between armrests from 18" to 21" wide (457 to 533mm)
- 1/2 hp, 24 VDC motor Battery-powered 24-volt motor
- Pair of 12-volt, maintenance-free batteries
- Charger plugged in at top or bottom landing 110 VAC, 60 Hz outlet
- Electronic controller with soft start and soft stop
- Fused control circuit
- Wireless infrared call-send controls at both landings
- Continuous pressure buttons
- Aluminum rail on 6" (152 mm) from wall
- 3" (76 mm) rail overhang at top landing with seat height of 18" (457mm)
- 22 1/2" (572 mm) seat height at bottom landing
- Adjustable seat height
- Unit is completely reversible on site for quick installation
- Lateral adjustment on footrest for uneven treads
- Foldable footrest, seat and padded armrests
- Seat that swivels and locks in 45° and 90° positions both directions
- Seatbelt and seat swivel switch
- ABS plastic covers Obstacle sensors under footrest and on carriage

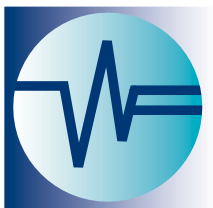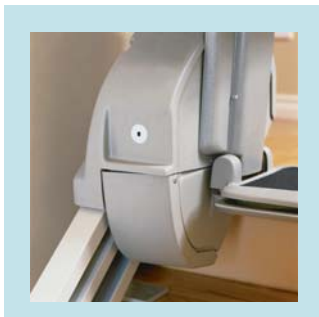

**WRIGHT
&
FILIPPIS**SM

For more information, please contact
the Lifts, Elevators & Ramps Department
(800) 482-0222 or (248) 829-8214
www.FirstToServe.com

These and other barrier-free services are available throughout the entire state of Michigan.